

# TDJ-5158BKF

## Wall Mount Antenna

### Technical Sheet




#### Applications


- 5.8GHz ISM/UNII Frequency
- 5.8GHz WLAN Systems
- Support 802.11a,g
- Point to point,multipoint Systems

#### Features

- Superior Performance
- High Gain, Low VSWR
- Indoor Used

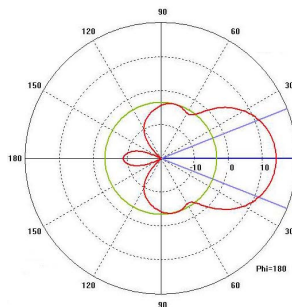

H-Plane

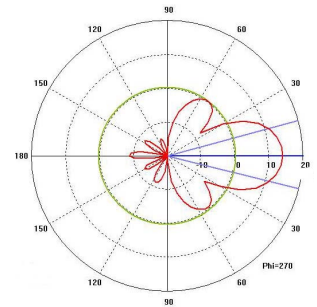


E-Plane

#### Specifications

Model	TDJ-5158BKF
Freq. Range-MHz	5100~5850
Bandwidth-MHz	750
Gain-dBi	14
VSWR	≤2
Beamwidth-°	E: 30 H: 43
F/B Ratio-dB	≥20
Impedance-Ω	50
Polarization	Vertical
Max. Power-W	100
Connector Type	N Female
Dimension-mm	145x97x38
Weight-Kg	0.52

#### Install Sketch

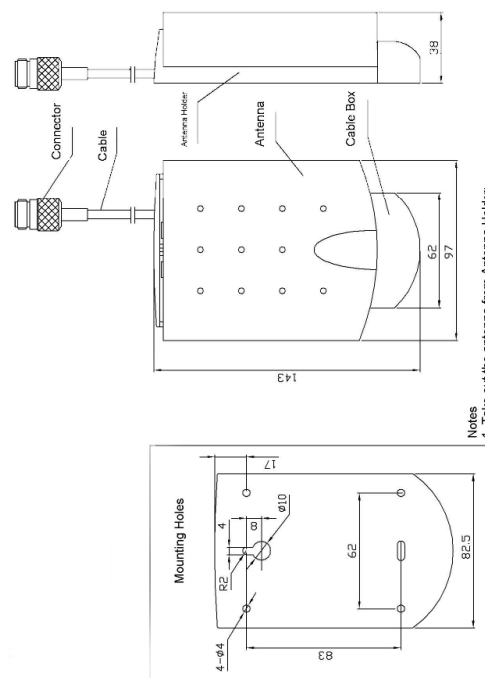

- Notes
1. Take out the antenna from Antenna Holder;
  2. Cut the antenna cable to the length;
  3. Mounting the Antenna Holder to the wall;
  4. Put the antenna to the Antenna Holder.

